

nutribullet **SMARTSENSE™**

BLENDER COMBO



User guide.

Important safeguards.

When operating your nutribullet® device, remember:

SAFETY COMES FIRST. WHEN USING ANY ELECTRICAL APPLIANCE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE OBSERVED, INCLUDING THE FOLLOWING:

⚠ WARNING! To avoid the risk of serious injury, death, property damage, or damage to your device, carefully read all instructions before operating your nutribullet® device. When using any electrical appliance, basic safety precautions should always be observed, including the important information in this User Guide.

If you let anyone else use your nutribullet®, make sure that they understand the health and safety information in this User Guide, as well as any additional safety or usage instructions provided. Each person using a device should carefully read the User Guide in its entirety to become familiar with the safe operation of the unit.

! Save these instructions! • FOR HOUSEHOLD USE ONLY

GENERAL USE AND SAFETY:

Failure to follow all instructions regarding the use of your nutribullet® device may result in serious personal injury, death, or property damage. Be aware of possible hazards when using or storing your nutribullet®.

⚠ WARNING! EXTREME CAUTION SHOULD BE EXERCISED WHEN USING HOT, WARM, OR CARBONATED INGREDIENTS. NEVER BLEND HOT, WARM, OR CARBONATED INGREDIENTS IN THE CUP AS CONTENTS MAY PRESSURIZE AND MAY ERUPT UPON OPENING, CAUSING SERIOUS BODILY INJURIES OR DAMAGE. USE ONLY THE BLENDING PITCHER AND VENTED PITCHER LID TO BLEND HOT, WARM, OR CARBONATED INGREDIENTS.

- Do not use the nutribullet® for other than its intended purpose.
- Do not leave or put non-food items in any of the attachments when blending. Doing so may damage the unit or crack or shatter the attachment, resulting in bodily injury or property damage.

- Close supervision is necessary when any appliance is used by or near children to ensure they do not play with the appliance. Keep cord out of reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning the use of the appliance by a person responsible for their safety.
- **NEVER LEAVE THE NUTRIBULLET® UNATTENDED WHILE IT IS IN USE.**
- Do not place or operate your nutribullet® on uneven or unstable surfaces.
- The risk of fire, shock, or damage to nutribullet® during cleaning can be reduced by taking the following precautions:
 - Turn off your device and unplug it before cleaning.
 - Only clean the exterior of your device.
 - Clean your device with a dry cloth.

- To protect against the risk of electrical shock, **DO NOT** immerse the Motor Base in water or other liquid. The Motor Base should only be cleaned by gently wiping with a clean cloth.
- Do not place any nutribullet® part or accessory in a microwave, conventional oven, air fryer, or stovetop pot, or immerse in boiling water, as this will damage the part.
- Do not place or operate your nutribullet® on or near a hot gas or electric burner, or in a heated oven.

⚠ WARNING! NEVER WASH YOUR NUTRIBULLET® PARTS OR ACCESSORIES USING THE SANITIZE OR HEAT CYCLE OF YOUR DISHWASHER. DOING SO CAN WARP THE PART, WHICH CAN CREATE HAZARDOUS CONDITIONS DURING USE THAT MAY RESULT IN BODILY INJURY OR PROPERTY DAMAGE.

- **NEVER** place any nutribullet® parts or accessories in the freezer. Do not use nutribullet® parts and accessories as storage containers in the freezer.
- This appliance is equipped with a safety interlock system. The motor will not operate unless the Pitcher is properly seated and locked onto the Motor Base and the Lid is securely installed on the Pitcher.
- Never attempt to defeat any safety interlock mechanisms on the appliance.
- Remove and safely discard any packaging material or promotional labels before using the appliance for the first time.
- Do not operate your nutribullet® if any of the parts and accessories are or appear to be damaged in any manner that may impair proper function or create a safety hazard. If you suspect your nutribullet® parts and/or accessories may be damaged, contact Customer Service for assistance at **1 (800) 523-5993**.
- Do not use parts, accessories or attachments from other

manufacturers, different models of nutribullet® or magic bullet® products, or canning jars. Use of parts, accessories or attachments **NOT** specifically designed for your particular nutribullet® device may damage your unit or cause serious bodily injury, fire, or electric shock.

- Use only genuine nutribullet® attachments/accessories specifically designed for your nutribullet® device. Aftermarket parts are not made to nutribullet® specifications and may damage your unit or cause serious injury.

- **DO NOT USE OUTDOORS.**
- **ALWAYS UNPLUG YOUR NUTRIBULLET® WHEN NOT IN USE.**
- To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Always **POWER OFF** and **UNPLUG** the unit and wait until the Blade comes to a complete stop before assembling, disassembling, changing accessories, or cleaning.
- This appliance has a polarized polarized plug, on which one blade is wider than the other. To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit into the outlet properly, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

BLENDING WITH NUTRIBULLET® CUPS:

⚠ WARNING! NEVER BLEND HOT, WARM, OR CARBONATED INGREDIENTS OR LIQUID IN THE NUTRIBULLET® CUP! HEATED OR CARBONATED INGREDIENTS CAN PRESSURIZE THE CONTENTS, WHICH MAY CAUSE THE CUP AND BLADE TO FORCIBLY SEPARATE UPON OPENING OR REMOVING FROM MOTOR BASE. THIS MAY RESULT IN THE EXPULSION OF HOT CONTENTS FROM THE CUP OR

EXPOSURE OF THE BLADE, BOTH OF WHICH MAY RESULT IN SERIOUS BODILY INJURIES (INCLUDING THERMAL BURNS) OR PROPERTY DAMAGE. ONLY USE THE BLENDING PITCHER AND VENTED PITCHER LID TO BLEND HOT, WARM, OR CARBONATED INGREDIENTS.

 **WARNING! NEVER BLEND FOR LONGER THAN ONE MINUTE.**

To avoid heating and overpressurizing the Cup:

- **NEVER** blend hot, warm, or carbonated ingredients in the nutribullet® Cups.
 - Only blend room-temperature or refrigerated ingredients (70°F/21°C or cooler). After blending, transfer the mixture to a stovetop pot to heat and eat.
- **NEVER blend for longer than one minute.**
 - Friction from the rotating blades can cause contents to heat and pressurize. Continuous blending for more than one minute may cause the Cup to separate from the Blade, exposing the Blade or expelling heated ingredients, both of which can cause injury.
 - Do not run consecutive one-minute blending cycles. Allow contents to settle for at least 10 to 15 minutes and release any built-up pressure by opening the Cup slowly and carefully, pointing away from your body, before running another blending cycle.

 **WARNING! NEVER ATTEMPT TO OPEN THE CUP IF IT FEELS HOT OR WARM TO THE TOUCH. SEE CUP CAUTION SECTION FOR DETAILS.**

- **Do not blend anything carbonated or effervescent.**
 - Carbonated and effervescent ingredients (carbonated water, baking powder, baking soda, yeast, some batters, cake mix, dry ice, or other things that become

bubbly) release gasses that increase pressure within the Cup. Pressure from released gases can cause a sealed nutribullet® Cup to separate, resulting in possible injury and/or property damage.

NOTE: Some protein powders include effervescent ingredients. Always check supplement ingredients before adding.

- **Do not overfill.**
 - Filling above the MAX line can result in leakage. The cyclonic action of the nutribullet® requires space to blend effectively. Exceeding the MAX line can result in leakage and may create dangerous conditions for pressurization, which can cause the Cup and Extractor Blade to separate, resulting in possible injury and/or property damage.
- **DO NOT leave blended foods inside a sealed Cup.**
 - Blended mixtures can spoil and ferment, increasing pressure when left inside the Cup.
 - Use the To-Go Lid or transfer to a vented container for storage after blending.

CUP CAUTION:

 **WARNING! NEVER ATTEMPT TO OPEN A SEALED NUTRIBULLET® CUP IF IT FEELS HOT OR WARM TO THE TOUCH. THE CONTENTS MAY BE HEATED AND PRESSURIZED, WHICH CAN CAUSE THE CUP TO VIOLENTLY SEPARATE WHEN OPENED AND POTENTIALLY RESULT IN BODILY INJURY AND/OR BURNS. IF THE CUP FEELS HOT OR WARM, TAKE THE FOLLOWING PRECAUTIONS:**

1. Stop blending and unplug the unit.
2. **LEAVE ALONE. DO NOT TOUCH. DO NOT OPEN.** Leave the Cup where it is and do not touch it or allow others to touch it.
3. **DO NOT** attempt to remove the Cup from the Motor Base. **DO NOT** attempt to twist-off the Extractor

Blade from the Cup.

4. Allow the Cup to cool for at least 30 minutes.
5. After 30 minutes, check if the Cup is completely cooled. If it is still warm, give it more time to cool.
6. Once the Cup is cool to the touch, slowly and carefully disengage it from the Motor Base.
7. Point the Cup away from your face and body. Use a towel to slowly untwist the Extractor Blade from the cup, gently releasing any residual pressure as you open.

 **WARNING! NEVER ATTEMPT TO SEPARATE THE CUP FROM THE EXTRACTOR BLADE BY FORCING OR PRYING APART THE COMPONENTS. DOING SO MAY CRACK OR SHATTER THE CUP, WHICH CAN RESULT IN BODILY INJURY. IF YOU ARE UNABLE TO UNTWIST THE EXTRACTOR BLADE FROM THE CUP, CONTACT CUSTOMER SERVICE AND PROPERLY DISPOSE OF THE CUP AND ITS CONTENTS.**

- **NEVER** handle the a sealed nutribullet® Cup if it feels hot or warm.
- If the Cup is cool, securely wrap or box the Cup as the contents may ferment and pressurize causing the Cup to forcibly separate, which may result in bodily injury or property damage.
- **DO NOT** dispose or leave a sealed Cup in an indoor trash container. Dispose of the securely wrapped or boxed Cup at the bottom of a covered outdoor trash container.

CUP SAFETY:

Proper Cup use is important for the safe operation of your nutribullet®. Using the Cup inconsistent with these instructions may result in bodily injury,

property damage, or damage to your unit. Remember, **NEVER** blend hot, warm, or carbonated ingredients or liquid in the nutribullet® Cup, and **NEVER** blend for more than one minute.

- **ALWAYS** securely tighten the Extractor Blade to the Cup. An improperly tightened Extractor Blade may lead to leakage. If the Cup starts to leak during blending, **DO NOT** attempt to disengage the Cup from the Motor Base as the Cup may separate from the Blade, which can expose the Blade and cause laceration injuries. If you notice leakage, **DO NOT** attempt to remove the Cup. Immediately unplug the unit and allow the blades to come to a complete stop before removing the Cup from the Motor Base.
- Always make sure the Cup is securely locked onto the Motor Base before blending. The motor will not turn on unless the Cup is set in the locked position.
- Do not overfill or exceed the MAX line. Exceeding the MAX line can result in leakage.
- Do not remove the Cup while the unit is in operation.
- **NEVER** operate your nutribullet® with an empty Cup attached.
- Do not crush ice or overfill the Cup with ice. Your nutribullet® is not intended to be used as an ice crusher. Overfilling the Cup with ice may cause the ice to wedge into the Blade, which can jam the Blade and cause the motor to overheat.
- Always use sufficient liquid ingredients when blending.
- Do not place any nutribullet® parts or accessories on the bottom rack or use the heat/sanitize cycle on your dishwasher.
- Cups, To-Go Lids, and other nutribullet® parts or accessories are **NOT** microwave-safe.
- Do not use the Extractor Blade as a storage lid, as it is not vented. Your blended mixture can ferment,

increasing pressure within the Cup, which may cause separation that can lead to bodily injury and property damage. Use the To-Go Lid or transfer to a vented container for storage after blending.

- To reduce the risk of injury, never place or store an exposed Extractor Blade on the Motor Base without the Cup properly attached.
- Do not leave any non-food items in the Cup when blending. Remove all utensils from the Cup.
- Do not blend stone fruit in this appliance unless pits/seeds have been removed. Fruit pits may damage the Cup, potentially resulting in shattering and personal injury. In addition, apple seeds and the pits of cherries, plums, peaches, and apricots contain a chemical known to release cyanide into the body when ingested.
- Periodically inspect your nutribullet® Cup for damage or wear that may impair proper function or create a safety hazard.
- Do not use the Cup if you detect cracking, cloudiness, or other damage. You may purchase new Cups at nutribullet.co.uk or by contacting Customer Service.
- Periodically inspect your Extractor Blade. If the blades do not rotate freely or if the gasket is missing or damaged, immediately discontinue use and contact Customer Service.
- Do not use after-market replacement parts for your nutribullet®. After-market replacement parts may result in damage to your nutribullet® or present safety hazards resulting in bodily injury or damage. Only order replacement parts from nutribullet.co.uk or by contacting Customer Service. Please specify the model for parts that are compatible with your unit.

USING THE BLENDING PITCHER:

⚠ WARNING! ONLY USE THE BLENDING PITCHER WITH THE VENTED PITCHER LID TO BLEND HOT, WARM, OR CARBONATED INGREDIENTS. NEVER BLEND HOT, WARM, OR CARBONATED INGREDIENTS IN A NUTRIBULLET® CUP, AS CONTENTS MAY PRESSURIZE AND ERUPT UPON OPENING, CAUSING SERIOUS BODILY INJURIES OR DAMAGE.

- **NEVER** use your nutribullet® Cups to blend hot, warm, or carbonated ingredients or liquids.
- **ALWAYS** affix the Vented Pitcher Lid to the Blending Pitcher with the spout down and closed before blending to prevent ingredients from splashing or hot ingredients from splattering, which may cause burns, bodily injuries, or property damage.
- After blending hot ingredients or liquids, exercise caution when opening the Pitcher Lid, and be mindful of escaping hot steam or splattering hot ingredients.
- Do not overfill the Blending Pitcher beyond the MAX line.
- Do not use the Blending Pitcher if you detect cracking, cloudiness, or other damage. Visit nutribullet.co.uk or contact Customer Service to purchase a new Blending Pitcher.

⚠ WARNING! TO INCORPORATE INGREDIENTS DURING BLENDING, CAREFULLY OPEN THE LID CAP FROM THE PITCHER LID AND GENTLY POUR OR DROP INGREDIENTS INTO THE MIXTURE. BE ESPECIALLY MINDFUL WHEN ADDING TO HOT INGREDIENTS AND LIQUIDS, AS ESCAPING STEAM OR SPLATTERS MAY PRESENT A RISK OF INJURY.

- When using manual speeds, start blending on the LOW setting and, once ingredients are integrated, adjust the speed as needed.

BLENDER PITCHER SAFETY:

Proper Blending Pitcher use is important for the safe operation of your nutribullet®. Using the Blending Pitcher inconsistent with these instructions may result in bodily injury, property damage, or damage to your unit.

This appliance is equipped with a safety interlock system. The motor will not operate unless the Pitcher is properly seated and locked onto the Motor Base and the lid is securely installed on the Pitcher.

- Only operate the Blending Pitcher with the Pitcher Lid securely locked in place and the spout closed.
- Before blending, check that the vent slots on the Pitcher Lid are clear and unobstructed. Clogged or obstructed vent slots will pressurize the contents, which can cause the release of hot steam or splattered ingredients upon opening.
- For recipes that require certain ingredients to be incorporated during blending, first add the base ingredients, then attach the Pitcher Lid and begin blending. Once the ingredients are mixed well, twist open the Vented Lid Cap and carefully pour or drop ingredients into the blended mixture. If the blended mixture is hot or warm, use caution and open the Vented Lid Cap slowly, being mindful of escaping hot steam or the splattering of hot ingredients. Always reinstall the Vented Lid Cap after adding ingredients.
- **NEVER** place hands or use utensils such as spatulas, spoons, or other tools that may make contact with the spinning blades while in operation. Doing so can damage the unit, shatter the Blending Pitcher, or cause severe bodily injury or property damage.
- **ONLY USE THE TAMPER PROVIDED** with your nutribullet® through the cover opening to push ingredients closer to the Blade. **NEVER** use the

Tamper without the Pitcher Lid in place. The Tamper is specifically designed to avoid contact with the Blade through the Pitcher Lid. A scraper may be used, but only when the blender is powered off and the blades are at a complete stop.

GENERAL BLADE SAFETY:

⚠ WARNING! BLADES ARE SHARP! HANDLE WITH CARE TO AVOID BODILY INJURY. NON-FOOD ITEMS OR HARD INGREDIENTS MAY DAMAGE THE BLADES. ROUTINELY INSPECT THE BLADES AND DISCONTINUE USE IF THE BLADES ARE DAMAGED OR DO NOT FREELY ROTATE. CONTINUED USE WITH DAMAGED BLADES OR USE INCONSISTENT WITH THESE INSTRUCTIONS MAY RESULT IN BODILY INJURY, PROPERTY DAMAGE, OR DAMAGE TO YOUR UNIT.

NEVER STORE THE UNIT WITH THE BLADE EXPOSED. ALWAYS COVER THE BLADE WITH THE CUP OR PITCHER LID. EXPOSED BLADES PRESENT A LACERATION HAZARD THAT MAY CAUSE SEVERE PERSONAL INJURY.

- Always **POWER OFF** and **UNPLUG** the unit and wait until the Blade comes to a complete stop before assembling, disassembling, changing accessories, or cleaning.
- **ALWAYS** securely tighten the Extractor Blade to the Cup to prevent leakage. If a leak occurs, power off or unplug the unit and allow the motor to come to a complete stop before removing.
- **DO NOT** crush ice. Your nutribullet® is not intended to be used as an ice crusher, which may shatter the Cup or Pitcher, causing injury or damage. Always use sufficient liquids when blending.

- Do not overload the Cup or Pitcher as this may prevent the blades from spinning.
- Do not attempt to grind dry ingredients such as grains, cereal, or coffee, as this may overheat the motor and/or damage the blades.
- **AVOID CONTACT WITH MOVING PARTS!** Keep hands and utensils out of and away from the Blade to reduce the risk of severe personal injury or damage to the unit.
- **NEVER** place the Extractor Blade or other accessory parts on the bottom rack of the dishwasher or use the heat/sanitize cycle while cleaning the components in the dishwasher.
- Periodically inspect your Blade. If the blades do not rotate freely or are damaged, immediately discontinue use and contact Customer Service. For optimal performance, we recommend replacing the Blade every 6 months, or as needed, depending on use.
- Use of incompatible parts or aftermarket parts may result in damage to your nutribullet® unit or present safety hazards that may cause personal injury or property damage. When ordering replacement parts, always use genuine nutribullet® parts and accessories from **nutribullet.co.uk** or contact Customer Service.

ELECTRICAL SAFETY:

Modification, improper use, and failure to follow the instructions for proper setup, use, and care of your nutribullet® device can increase the risk of property damage, serious personal injury, or death.

- **NEVER** use the unit in countries or locations with incompatible electrical specifications or plug types.
- **DO NOT use the unit with a voltage converter device, as it may cause electrical shorting, fire, or electric shock, all of which may result in personal injury or property**

damage.

- Do not use the unit if the cord, plug, or Motor Base has been immersed in water or other liquids.
- Do not use the unit in a wet area, or anywhere it could become wet. Any significant spillage on, under, or around the Motor Base should be cleaned and dried before plugging in and using the unit.
- Do not attempt to plug the unit into an electrical outlet with wet hands.
- Avoid contact with the touchscreen display when the power icon is illuminated to prevent inadvertent and unexpected operation of the unit.
- Do not modify the electrical cord in any way.
- Do not operate any unit with a damaged electrical cord or plug. The electrical cord and plug are not suitable for replacement. If damaged, the appliance should be replaced. Contact Customer Service for assistance at **1 (800) 523-5993**.
- Do not allow or place the electrical cord near or touching any hot surfaces, heat source, or flame, including the stove.
- Do not allow the electrical cord to hang over the edge of a table or counter.
- Do not pull, twist, or damage the power cord.
- Overloading the unit with ice or other ingredients may overheat the motor and engage the thermal breaker. If the internal thermal breaker shuts off the motor, unplug the Motor Base and let it cool for an hour before attempting to use it again. The thermal breaker will reset when the unit is unplugged and the thermal breaker cools down.
- Always **UNPLUG** your nutribullet® when it is not in use, and when assembling, disassembling, changing accessories, or cleaning.
- **NEVER** pull the power cord to remove the plug from the outlet. To unplug, grasp the plug and pull from the outlet.

- Use of incompatible parts or aftermarket parts may result in damage to your nutribullet® or present safety hazards that may cause personal injury or property damage. When ordering replacement parts, always use genuine nutribullet® parts and accessories from **nutribullet.co.uk** or contact Customer Service at **1 (800) 523-5993**.

VENTILATION:

- **NEVER** obstruct the ventilation openings on the bottom of the Motor Base of your nutribullet® device. Openings on the bottom of the Motor Base should be free of dust and lint and never obstructed. Obstructing the ventilation openings may overheat the motor, presenting a fire hazard that may cause property damage, serious personal injury, or death.
- **ALWAYS** operate the nutribullet® on a level surface, leaving unobstructed space beneath and around the Motor Base to permit proper air circulation. Slots on the bottom of the Motor Base are provided for ventilation to ensure reliable operation and to prevent the motor from overheating.
- **NEVER** place your nutribullet® on top of flammable materials such as newspapers, tablecloths, napkins, dishtowels, placemats, or similar materials.

MEDICAL SAFETY:

Always consult your physician regarding health and nutrition concerns and advice. The information contained in this User Guide, accompanied Recipe Guide, and/or online recipes are general suggestions and ideals, and are not meant to replace the advice of your physician.

MEDICATION INTERACTIONS:

- If you are taking any medications, especially cholesterol-lowering medication, blood thinners, blood pressure drugs, tranquilizers, or antidepressants, please check with your physician before trying any of the recipes contained in the Recipe Guide or published online.
- **ALWAYS** follow recommended maintenance and care instructions in the User Guide.
- **NEVER** operate your nutribullet® with damaged components. If your nutribullet® malfunctions in any way, immediately discontinue use and contact Customer Service. If you have any comments, questions, or concerns, please go to **nutribullet.co.uk** or call Customer Service.

! Save these instructions!

Contents.



- 2 Important safeguards**
- 12 What's included**
- 13 Assembly guide**
- 14 Control panel**
- 16 Blending with the Pitcher**
- 20 Blending with the Cup**
- 23 Care & maintenance**
- 26 nutribullet SmartSense™ Blender
 Combo one-year limited warranty**

Thank you for purchasing the nutribullet SmartSense™ Blender Combo.

What's included.



1500-watt
motor base



 
pitcher




pitcher lid with
vented lid cap



900ml cup

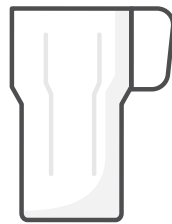

700ml
handled cup

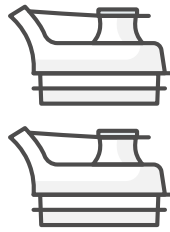 


2 to-go lids



extractor
blade




 tamper

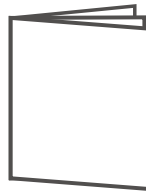


user guide

 Assembly guide.

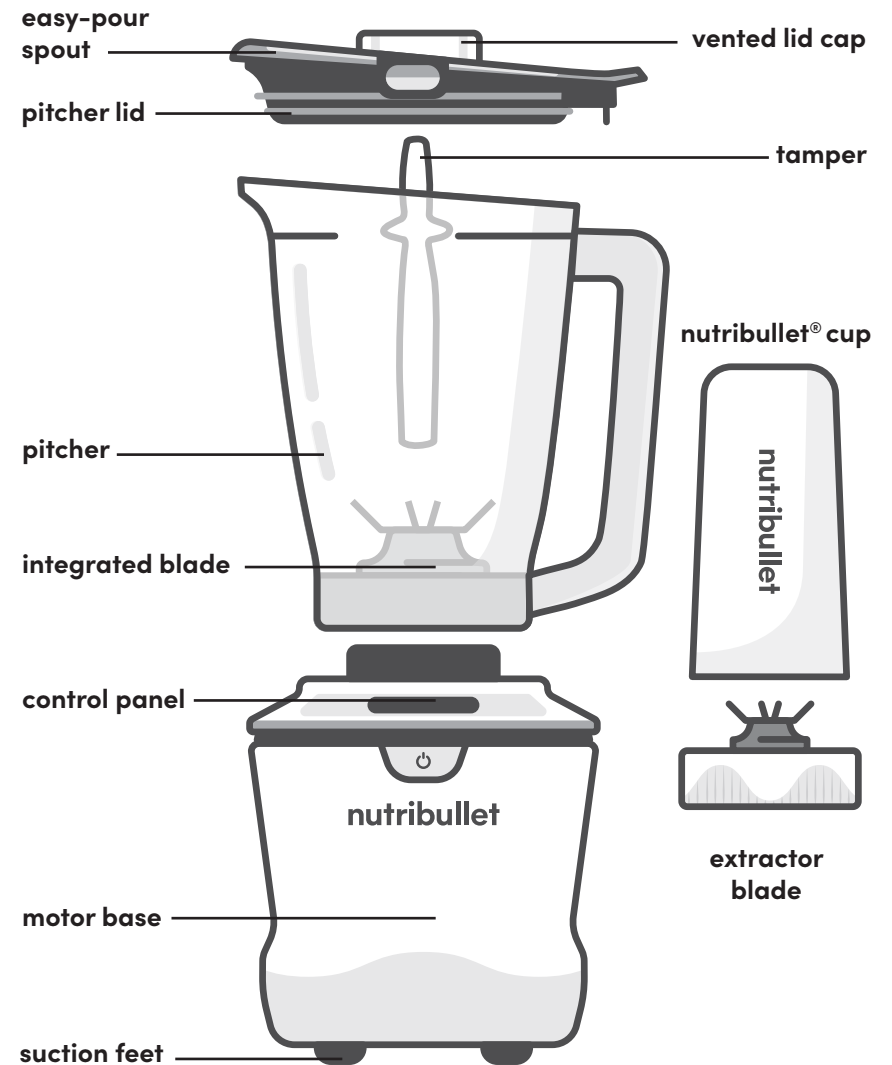


Product configurations may vary. To see our full list of nutribullet® accessories, please visit [nutribullet.co.uk](https://www.nutribullet.co.uk)

 Control panel.

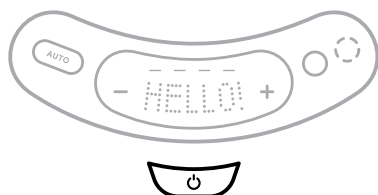


POWER

 The Power button turns on the unit and illuminates the Control Panel.

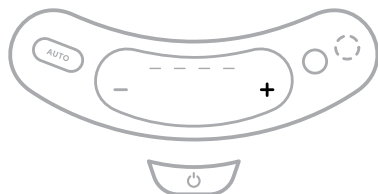


+

 The + button increases the blending speed within a range of 1 to 5. Blending speeds must be set prior to blending, and can be adjusted at any point of the blending process.

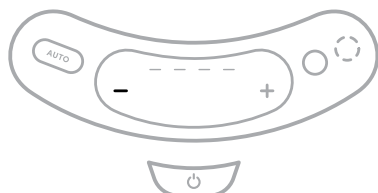

-

 
The — button decreases the blending speed within a range of 1 to 5. Blending speeds must be set prior to blending, and can be adjusted at any point of the blending process.

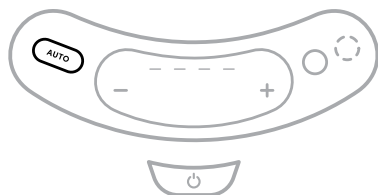

AUTO


The **AUTO** button runs a fully-automated cycle that determines the exact time, speed, and setting needed to optimally blend ingredients.

 NOTE: Any of the 5 speeds or **AUTO** program can be used with both the single serve cups and the blending pitcher. When blending with the single serve cups, the unit will automatically stop after 60 seconds of blending.

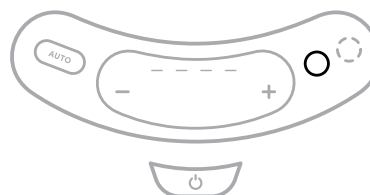


BLEND

 The **Solid Circle BLEND** button activates blending for manual speeds. Press the **BLEND** button once to start blending, and a second time to stop.

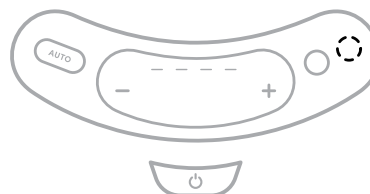

PULSE

 The **Dashed Circle PULSE** button activates the **PULSE** blending function. Set your blending speed, then press the **PULSE** button for hands-on control over blending time. Press and release quickly to pulse in short bursts, or press and hold the button down for a longer pulse.

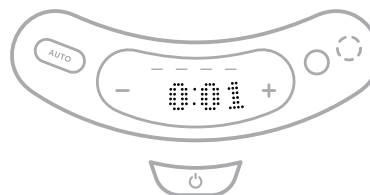

TIMER

An LED timer counts up during the blending cycle to keep track of the length of your blends. Both manual and **AUTO** blending programs display the timer during blending. The speed setting is displayed in the status bar above the countdown.

Blending with the Pitcher.

PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:

- Make sure the Motor Base is plugged in for use.
- **DO NOT** attempt to operate the Blending Pitcher on the appliance without attaching the Pitcher Lid and Vented Lid Cap.
- Never run the appliance while empty.
- Appliance accessories are not intended to be used in the microwave; microwaves may damage the accessories.
- Never leave the appliance unattended while in use. Use extra caution when blending hot liquids in the Pitcher.

! WARNING! ALWAYS ATTACH THE PITCHER LID AND VENTED PITCHER LID CAP TO THE PITCHER BEFORE BLENDING HOT LIQUIDS TO PREVENT SPLATTERING OF CONTENTS WHICH MAY CAUSE BURNS AND BODILY INJURIES. THE VENTED LID CAP IS VENTILATED TO ALLOW STEAM AND PRESSURE TO BE RELEASED WHILE GUARDING AGAINST EXCESS SPLASHING. WHEN BLENDING HOT INGREDIENTS, DO NOT PLACE HANDS NEAR THE VENTED LID CAP AS HOT STEAM AND SPLATTERS RELEASED CAN RESULT IN SCALDING OR BURN INJURIES.

FOR RECIPES THAT REQUIRE CERTAIN INGREDIENTS TO BE INCORPORATED DURING BLENDING, CAREFULLY REMOVE THE VENTED LID CAP AND POUR OR DROP INGREDIENTS INTO THE BLENDING MIXTURE. BE ESPECIALLY MINDFUL WHEN ADDING INGREDIENTS TO HOT INGREDIENTS AND LIQUIDS, AS ESCAPING STEAM OR SPLATTERS MAY PRESENT A RISK OF INJURY. DO NOT EXCEED THE MAX LINE WHEN INSERTING ADDITIONAL INGREDIENTS. ALWAYS REINSTALL THE VENTED LID CAP AFTER ADDING THE INGREDIENTS.

ALWAYS START THE BLENDING CYCLE ON THE LOW SETTING, INCREASING SPEED ONCE THE INGREDIENTS ARE INTEGRATED AND THE MIXTURE IS LEVEL (NO SPLASHING).

! WARNING! NEVER USE A NUTRIBULLET® CUP ACCESSORY, TO BLEND HOT, WARM, OR CARBONATED INGREDIENTS. DOING SO MAY PRESSURIZE AND EXPEL THE HOT CONTENTS UPON OPENING RESULTING IN SERIOUS BODILY INJURY OR DAMAGE.

This appliance is equipped with a safety interlock system. The motor will not operate unless the Pitcher is properly seated and locked onto the Motor Base and the Lid is securely installed on the Pitcher.



 
- 1** Place the **Motor Base** on a clean, dry, level surface, such as a counter or table.



- 2** Place the **Pitcher** on a clean, dry, level surface and add the ingredients to the **Pitcher**, making sure they do not exceed either the lower **LIQUID MAX** (1.6L) or higher **SOLID MAX** (1.8L) line.



- 3** Attach the **Lid** to the **Pitcher** with the **Pour Spout Cover** opposite the handle. Align the Interlocking mechanism, located under the thumb push portion, with the opening on the top of the **Pitcher's** handle and push down for a secure fit.

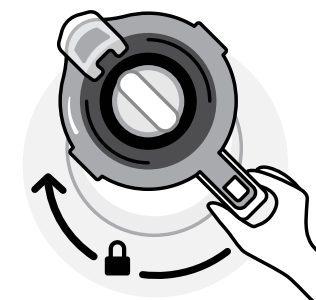

- 4** Place the **Pitcher** onto the **Motor Base** with the handle pointed directly toward the **Control Panel**. Twist clockwise to lock the **Pitcher** into place. (You should hear a "click" when it's locked.)

 
NOTE: If you are left-handed, place the handle facing toward the center of the blending **Control Panel** and twist clockwise.



- 5** Plug the **Motor Base's** power cord into an electrical outlet.



- 6** Press the **Power Button** to turn on the Blender. You will see the **Control Panel** illuminate.

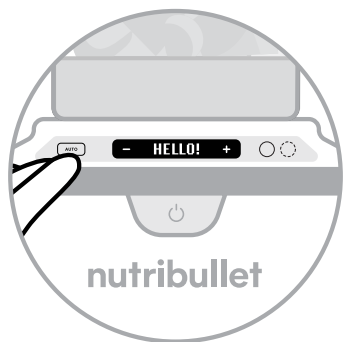

- 7** Press the **+** or **-** buttons to increase or decrease blending speeds. Press the **Solid Circle** to start a blending cycle. Press the **Dotted Circle** for pulse blending. Press **AUTO** for an automated, high-speed blending cycle.

 
NOTE: You can press the **Solid Circle** or **AUTO** buttons again to pause or stop a blending cycle.



- 8** Once the blending cycle is complete, wait for the blades to stop turning.



- 9** Press the **Power Button** to turn off the blender.

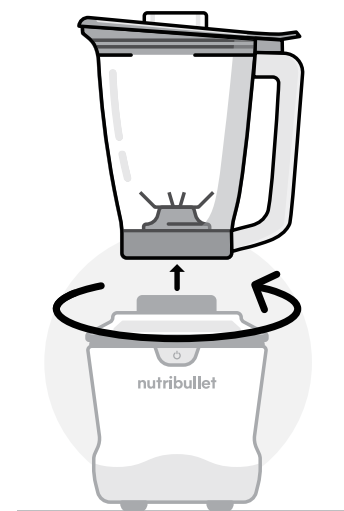

- 10** Twist the **Pitcher** counterclockwise to unlock, then lift it off the **Motor Base**. Pour and enjoy!

Blending with the Cup.

! WARNING! NEVER BLEND HOT OR WARM INGREDIENTS INSIDE THE NUTRIBULLET® CUP! USING THE CUP TO BLEND HOT OR WARM INGREDIENTS MAY CAUSE THE CUP TO SEPARATE, EXPELLING HOT CONTENTS OR EXPOSING THE BLADE, BOTH OF WHICH CAN CAUSE SEVERE BODILY INJURY AND PROPERTY DAMAGE.

 
USE ONLY THE VENTED PITCHER TO BLEND HOT OR WARM INGREDIENTS.

DO NOT BLEND FOR LONGER THAN ONE MINUTE.

DO NOT OVERFILL WITH ICE. ALWAYS USE SUFFICIENT LIQUIDS.



- 3** Twist the **Extractor Blade** onto the **Cup** so it is tightly sealed.

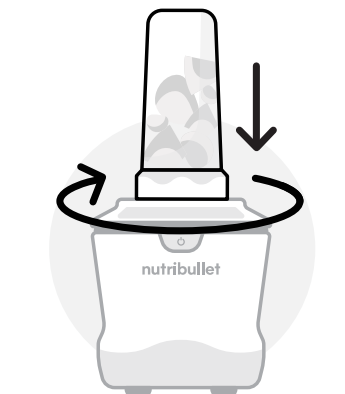

- 4** Turn the **Cup** upside down and place it onto the **Motor Base**, gently turning the **Cup** clockwise to lock into the **Motor Base**.

 


- 1** Place the **Motor Base** on a clean, dry, level surface, such as a counter or table.



- 2** Add ingredients to the **nutribullet® Cup**.


! WARNING! Do not overfill! To avoid leakage, do not add ingredients beyond the MAX line!

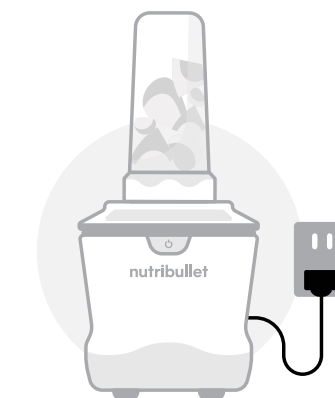

- 5** Plug the **Motor Base's** power cord into an electrical outlet.




 - 6** Press the **Power Button** to turn on the Blender. You will see the **Control Panel** illuminate.

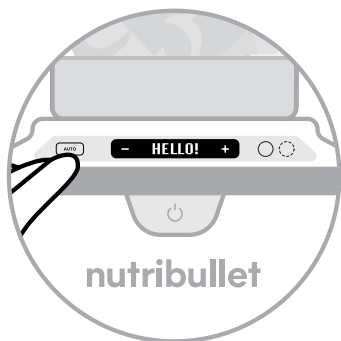


- 7** Press the **+** or **-** buttons to increase or decrease blending speeds. Press the **Solid Circle** to start blending cycle. Press the **Dotted Circle** for pulse blending. Press **AUTO** for an automated, high-speed blending cycle.

 
NOTE: You can press the **Solid Circle** or **AUTO** buttons again to pause or stop a blending cycle.

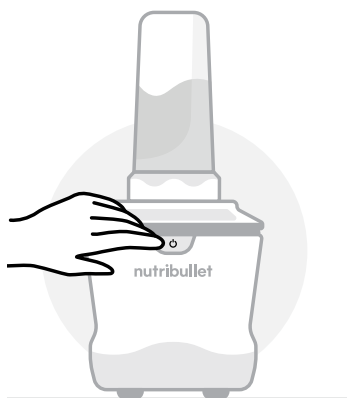

 - 9** Press the **Power Button** to turn off the blender.

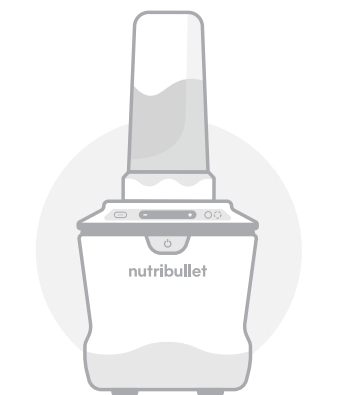

 - 8** Once the blending cycle is complete, wait for the blades to stop turning.

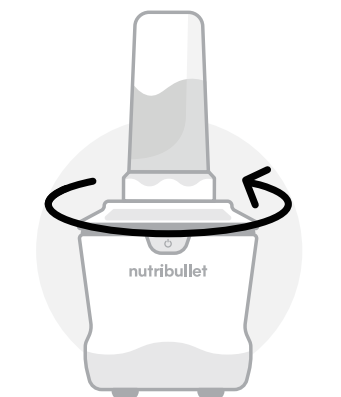


- 10** Unlock the assembly by gently twisting the **Cup** counterclockwise. You will hear a click.

! **WARNING! DO NOT blend hot or warm ingredients.**


! **WARNING! DO NOT blend for longer than one minute.**

Care & maintenance.

 
Here's how to clean your nutribullet®:

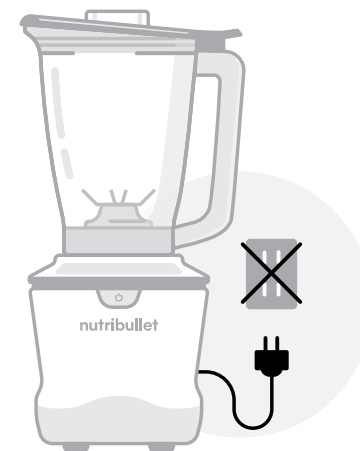

 - 1** **ALWAYS POWER OFF THE UNIT** and **UNPLUG** the **Motor Base** from the power outlet when it is not in use. Only attempt to handle the appliance once all parts have stopped moving! This includes during assembly and disassembly, while changing accessories during cleaning, and any time you leave the machine unattended.

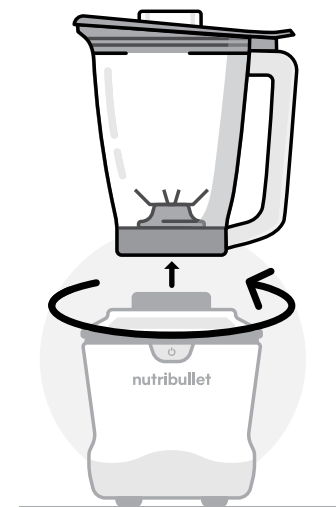

 - 2** Detach the **nutribullet® Pitcher** or **Cup** from the **Motor Base**.

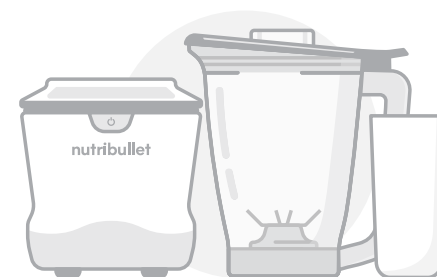

- 3** Clean the individual components (**Motor Base**, **Pitcher** and **Cup**) as recommended in the following pages.

NUTRIBULLET® PITCHER:

 **WARNING! Blades are sharp! Use caution when cleaning the Pitcher.**

- The Pitcher is dishwasher-safe. We recommend rinsing and briefly scrubbing it with a dish brush to remove any remaining debris before placing it in the dishwasher. **NEVER** use the sanitize cycle to wash the Pitcher — heat this high can warp the plastic.
- If preferred, hand-wash the Pitcher with soap and water. Stuck-on ingredients might require extra scrubbing with a dish brush or sponge.
- Regularly check the structure of the Pitcher and twisting threads for cracking, crazing, or breakage. If damaged, replace immediately to prevent the risk of personal injury.

 **WARNING! NEVER USE A PITCHER THAT DOES NOT PROPERLY ALIGN WITH THE BLADE. Doing so may cause the Pitcher and Motor Base to separate, exposing the blade assembly and potentially causing severe personal injury.**

EXTRACTOR BLADE:

 **WARNING! Blades are sharp! Handle the Extractor Blade with care when cleaning!**

- Clean blades immediately after each use. For stubborn buildup, use a small brush or sponge to dislodge. After washing, dry the Extractor Blade completely.
- Do not remove any components of the Extractor Blade; this can result in permanent damage to the Blade, resulting in leakage when blending. If, over time, the Extractor Blade becomes loose or damaged, you may order a new Extractor Blade by contacting Customer Service at **1 (800) 523-5993**.
- Periodically inspect your Extractor Blade. If the blades do not rotate freely or are damaged, immediately discontinue use and contact Customer Service. For optimal performance, we recommend replacing the Blade every 6 months, or as needed, depending on use.

 **WARNING! Never leave the Extractor Blade exposed when storing. Always attach the Extractor Blade to the Pitcher for proper storage.**

NUTRIBULLET® CUPS & TO-GO LIDS:

These items are **TOP RACK** dishwasher-safe. We recommend rinsing and briefly scrubbing them with a dish brush to remove any remaining debris before placing them in the dishwasher. **NEVER** use the sanitize cycle to wash the Cups — heat this high can warp the plastic.

TAMPER:

- Always hand-wash the Tamper with soap and water. Stuck-on ingredients might require extra scrubbing with a dish brush or sponge.

STUBBORN CLEANUP:

If ingredients dry inside the Nutribullet® Cup or Pitcher, fill your vessel with room-temperature water (70°F/21°C) to the liquid MAX line and add 1-2 drops of dish soap. For Cups, twist on the Extractor Blade and place the Cup on the Motor Base. Blend on LOW for 20-30 seconds. For the Pitcher, attach the Pitcher Lid with the Vented Lid Cap inserted, and place the Pitcher on the Motor Base. Blend on LOW for 20-30 seconds; this should loosen debris enough to scrub away with soap and water.

STORING:

Store the Nutribullet® Pitcher upright with the Pitcher Lid secured on top. Do not place anything on top of the Pitcher Lid. Store the remaining pieces in a safe place where they will not be damaged and won't cause harm.

For replacement parts.

To order additional parts and accessories, please visit our website at **[nutribullet.co.uk/shop/accessories](https://www.nutribullet.co.uk/shop/accessories)** or feel free to contact Customer Service.

nutribullet SmartSense™ Blender Combo one-year limited warranty.

LIMITED WARRANTY FOR NUTRIBULLET®

nutribullet's limited warranty obligations are confined to the terms set forth below: nutribullet, LLC ("nutribullet") warrants this nutribullet® against defects in materials and workmanship for one year from the date of actual delivery of the product.

This limited warranty is valid only in the country in which the product is purchased and comes with the product at no extra charge. However, shipping and processing fees will be incurred for returns, replacements, and/or refunds.

If a defect exists, and nutribullet® is obligated under this limited warranty, at its option nutribullet® will (1) repair the product at no charge, using new or refurbished replacement parts, (2) exchange the product with a product that is new or that has been manufactured

from new or serviceable used parts and is at least functionally equivalent to the original product, or (3) refund the purchase price of the product. A replacement product assumes the remaining warranty of the original product. A repaired product has a one-year warranty from date of the actual delivery of the repaired product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes nutribullet's property. When a refund is given, your product becomes nutribullet's property.

OBTAINING WARRANTY SERVICE

For limited warranty service, call our Customer Service department or contact us via email from our website at [nutribullet.co.uk](mailto:info@nutribullet.co.uk), click the Contact Us link, fill out and

submit the customer contact form, and we will be glad to help you. When you contact our Customer Service department you will be asked for your name, address, and telephone number, and to provide proof of the original purchase (receipt) detailing a description of the product(s), purchase date or date of actual delivery of the product, and the appropriate nutribullet® serial number(s). Before you send your product for limited warranty service, please make sure to keep a copy of all relevant documents for your files (receipt, etc.). It is always recommended to purchase product insurance and tracking services when sending your product for service. Remember, shipping and processing fees will be incurred and are not covered by the one-year limited warranty.

EXCLUSIONS & LIMITATIONS

This nutribullet® One-Year Limited Warranty applies only to nutribullet® products distributed by or for nutribullet® that can be identified by the "nutribullet" trademark, trade name, logo, and bar code. nutribullet SmartSense™ Blender Combo One-Year Limited Warranty does not apply to any other products that may appear to be authentic but were

not distributed/sold by nutribullet, LLC.

Normal wear and tear is not covered by this limited warranty. This limited warranty applies to consumer use only and is void when the product is used in a commercial or institutional setting.

This limited warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated. Repair or replacement of the product (or, if repair or replacement is not feasible, a refund of the purchase price) is the exclusive remedy of the consumer under this limited warranty. nutribullet, LLC shall not be liable for any incidental or consequential damages for breach of this limited warranty or any implied warranty on this product.

This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state. nutribullet® is not liable for any damage to products not covered by this warranty (e.g., cups, books, User Guide). This limited warranty does not apply: (a) to damage caused by accident, abuse, misuse, or misapplication; (b) to damage caused by improper

maintenance (including unauthorized parts service); (c) to a product or a part that has been modified in any way; (d) if any nutribullet® serial number or trademark has been removed or defaced; and/or (e) if the product has been used with an adapter/converter.

THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND INSTEAD OF ALL OTHER WARRANTIES, REMEDIES, AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. NUTRIBULLET® SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF NUTRIBULLET® CANNOT LAWFULLY DISCLAIM IMPLIED WARRANTIES UNDER THIS LIMITED WARRANTY, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY.

No nutribullet® reseller, agent, or employee is authorized to make any modification to this warranty.

NUTRIBULLET® IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY. NUTRIBULLET® SPECIFICALLY DOES NOT REPRESENT THAT IT WILL BE ABLE TO REPAIR ANY PRODUCT UNDER THIS LIMITED WARRANTY.

Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages or exclusions or limitations on the duration of implied warranties or conditions, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary by state or province.

EN/ Explanation of the markings



EN/ This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal; recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



EN/ This product complies with the European regulation no. 1935/2004 on materials and articles intended to come into contact with food.



EN/ The transport and protective packing has been selected from materials, which are environmentally friendly for disposal and can be recycled. Ensure that any plastic, wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Rather than just throwing these materials away, recycle them



EN/ Manufacturer's declaration that product meets the requirements of the applicable EC directives.

high
street 
Need help?
We're here
for you

Visit
nutribullet.co.uk for:



FAQ'S



Video Guides



Register your product



Catch us all day,
every day on **Sky**
and **YouTube** too!

Join our community



Capital Brands Distribution, LLC | nutribullet.co.uk | All rights reserved.

nutribullet® and the nutribullet® logo are trademarks of CapBran Holdings, LLC registered in the U.S.A. and worldwide.

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

260713_NBF09700-1507AK