

magic
BULLET
Kitchen Express™



User guide.

Important safeguards.

Warning! To avoid the risk of serious injury, carefully read all instructions before operating your Magic Bullet Kitchen Express™. When using any electrical appliance, basic safety precautions should always be observed, including the following important information.

! Save these instructions! ● FOR HOUSEHOLD USE ONLY

GENERAL SAFETY INFORMATION

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- To protect against fire, electrical shock and injury to persons, do not immerse the appliance, motor base, cord, or plug in water or any other liquid.
- Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- **Blades are sharp. Handle carefully.**
- **DO NOT BLEND HOT INGREDIENTS!** Excessive pressure from heated ingredients can cause the vessel and base to separate and cause thermal injury. Only use room temperature or cooler ingredients.
- Do not attempt to defeat the cover interlock mechanism.
- Do not overfill the bowl, making sure to stay at or below the MAX line. Overfilling the bowl can cause damage to the

bowl and can cause the ingredients to leak.

- To reduce risk of injury, never place chopping blade or discs on base without first attaching bowl properly in place.
- To prevent overheating and pressure build up, never allow the Magic Bullet Kitchen Express™ to run for more than one minute at a time. Ingredients can begin to heat up which will add pressure inside the cup or bowl that may cause it to separate from the motor base and cause personal injury or property damage

WARNING:

AVOID CONTACT WITH MOVING PARTS.

Regularly inspect the supply cord, plug, and power appliance for any damage. **Do not operate any appliance with a damaged cord or plug or if the appliance malfunctions, or is dropped or damaged in any manner. Contact customer service by visiting Nutribullet.co.uk.**

- The use of attachments not recommended or sold by Capital Brands Distribution, LLC may cause fire, electric shock, or injury.
- The use of attachments, including canning jars, not recommended by Capital

Brands Distribution, LLC may cause a risk of injury to persons.

- This appliance is for household use only.
- Do not use this appliance for anything other than its intended use.
- Do not let the power supply cord hang over the edge of a table or counter top.
- Do not let the power supply cord touch hot surfaces, including stove, or become knotted or tangled.

Always make sure the bowl is securely locked in place (with lid on and locked) before the motor is turned on. Do not attempt to remove the bowl or lid while the unit is in operation.

- Make sure the unit is turned off after each use. Ensure power is set to OFF, the motor has stopped, the blade or disc has completely stopped moving, and the unit is unplugged before disassembling.
- Turn motor off and ensure that all moving parts have stopped before disassembling this appliance to remove food.

- Never store the cross blade in the motor base without a cup attached. The exposed blades can present a very dangerous hazard.
- Do not use this appliance if any parts appear to be damaged. If you have any questions or concerns, please contact customer service.

FEED CHUTE

- Do not overload or jam the feed chute with too much food.
- When using the food pusher, never use excessive force to push food down the feed chute.
- Wait until food naturally moves down the feed chute and into the bowl before adding more food.
- Do not push food into the feed chute with your fingers or utensils. **Only use food pusher provided.** Do not place hand or fingers into the feed chute. If food becomes lodged in the feed chute, use the food pusher provided or another piece of fruit or vegetable to push it down.

ADDITIONAL SAFEGUARDS

- Remove and safely discard any packaging material or promotional labels before using the appliance for the first time.
- Prior to your first use, safely discard, out of reach of children, the protective cover on the power plug to eliminate a choking hazard.
- Do not put any non-food items in any of the appliance pieces, as doing so may damage the unit and or cause severe personal injury or property damage.
- Do NOT attempt to use the cup and blade assembly from another Magic Bullet with the Kitchen Express.
- Only use the cup and blade assembly that comes with your Kitchen Express unit.

Always make sure the unit is properly and completely assembled before connecting to power outlet and operating.

- Ensure that the surface where the appliance operates is stable, level, clean, and dry.
- Vibration may occur during normal operation.
- Any significant spillage onto the surface under or around the appliance, or onto the appliance itself, should be cleaned and dried before continuing to use the appliance.
- When using this appliance, provide adequate air space above, below, and on all sides for circulation.

WARNING!

This appliance is not intended to be an ice crusher. Attempting to crush ice may cause permanent damage to the cross blades or cause the unit to malfunction, resulting in personal injury or property damage.

Make sure you have removed any rind from fruit prior to adding to the bowl.

Do not use fruits that contain seeds or pits unless they have been completely removed.

WARNING! Do not leave the appliance unattended when in use. Keep hands and utensils out of container while blending, and away from moving blades or discs while processing food, to reduce the risk of severe injury to persons or property damage. A scraper may be used but must be used **BUT ONLY WHEN THE APPLIANCE IS OFF.**

- Keep the appliance clean. Refer to the Care and Maintenance section for tips and best practices.
- Any maintenance other than cleaning should be performed by an authorized Service Center. **Do not attempt to repair or service this appliance yourself.** Contact customer service for assistance by visiting Nutribullet.co.uk.
- If you have any questions or comments or if some aspect of this user guide is not clear, please contact customer service for assistance by visiting Nutribullet.co.uk.

! Save these instructions!

Contents.



- 07 What's included
- 08 Assembly guide
- 09 Using the food processor
 - 09 Chopping blade
 - 12 Disc
- 17 Using the blender
- 19 Power settings
- 20 Care and maintenance
 - 20 How to store
 - 20 Replacement parts

Thank you for purchasing the Magic Bullet Kitchen Express™

What's included.



 
motor base



830mL cup
work bowl




food pusher

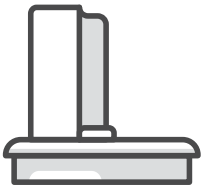

bowl lid
with feed chute



 chopping
blade

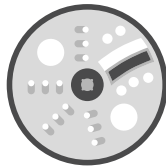

reversible slice/
shred disc



stainless steel
cross blade

 


2 tall cups



to-go lid


Assembly guide.

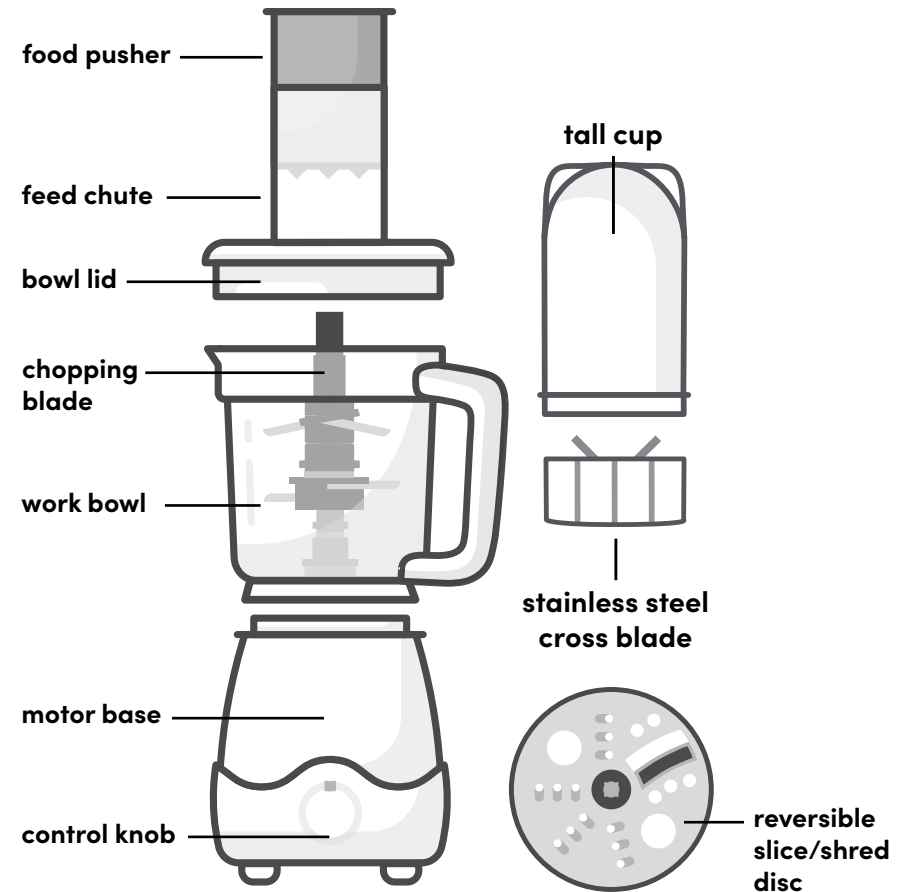


Using the food processor: chopping blade.



 - 1 Place work bowl on a clean, dry, flat surface, like a counter top.

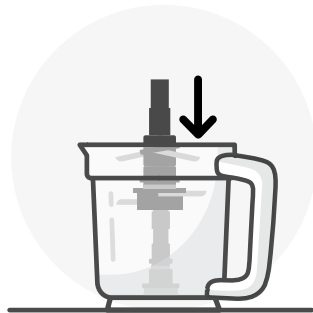


 - 2 Carefully place the chopping blade onto the bowl shaft.

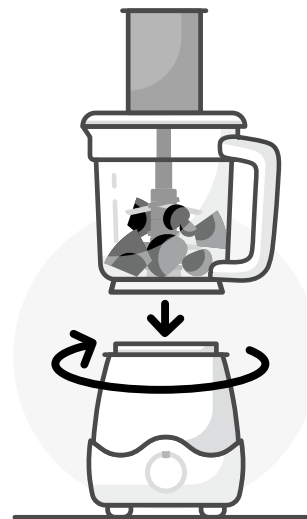

- 5 Place the work bowl on top of the motor base, and turn it clockwise to lock it in place.

 
NOTE: The bowl must be locked securely in place, or the motor will not run.

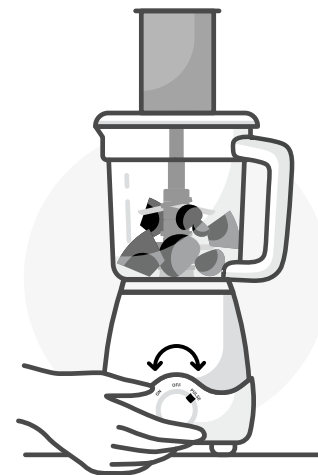

- 6 Turn the power control knob to **ON** or **PULSE** to activate the motor.



 - 3 Add your food ingredients to the bowl. Remember to keep your hand and fingers out of the bowl and away from the chopping blade.

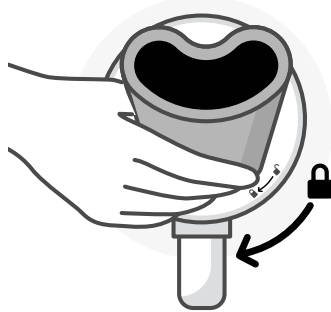

- 4 Place the bowl lid on top of the bowl and turn it clockwise to lock it into place. **NEVER** place hands, fingers, utensils, or any non-food items into the feed chute.

NOTE: The lid must be locked securely in place, or the motor will not run.



 
- 7 When you are finished, turn the knob to the **OFF** position.



- 8 Remove the bowl from the base by turning it counter-clockwise. Place bowl on clean, dry, flat surface.

WARNING: ALWAYS wait until the blade has stopped moving before removing the bowl.

Using the food processor: disc

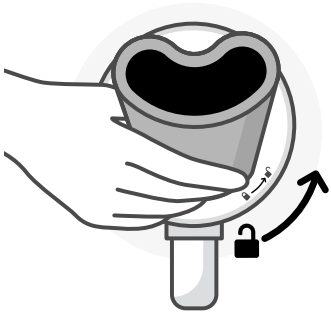

- 9** Remove the lid by turning it counter-clockwise to unlock.



- 10** Carefully remove the chopping blade and set it aside. **Blade is sharp, handle with care.**

 


- 11** Pour your food ingredients from the bowl.


WARNING: Never unload or pour food from bowl without first removing the chopping blade.




- 1** Place the work bowl on a clean, dry, flat surface, like a countertop.

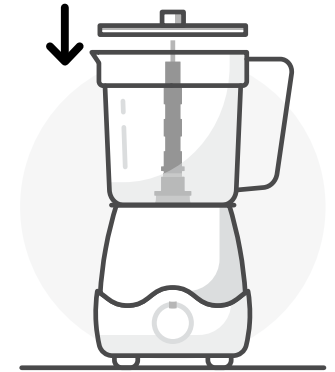

 - 2** Carefully place the blade disc onto the bowl shaft, with the desired side facing **UP**.

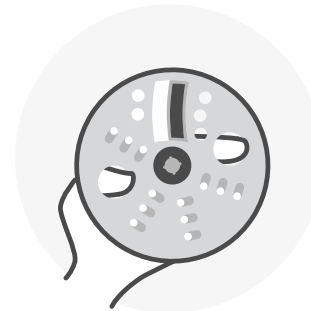


 NOTE: Always use the two larger holes (finger holes) to handle the blade discs.

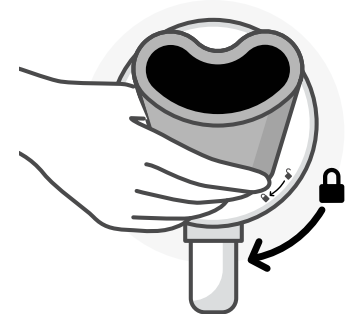

- 3** Place the bowl lid on top of the bowl and turn it clockwise to lock it into place. **NEVER** place hands, fingers, utensils, or any non-food items into the feed chute.

 NOTE: The lid must be locked securely in place, or the motor will not run.

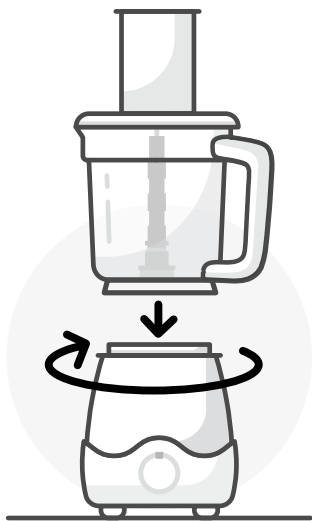

- 4** Place the work bowl on top of the motor base, and turn it clockwise to lock it in place.

 
NOTE: The bowl must be locked securely in place, or the motor will not run.



- 5** If needed, cut your food so it will fit in the feed chute. Then place food into the chute.



- 6** Turn the power control knob to the **ON** position.

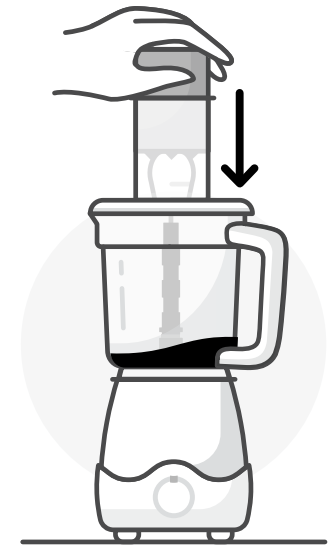

- 7** Always use the food pusher to guide food through the feed chute. **NEVER** place hands, fingers, utensils, or any non-food items into the feed chute.



 
- 8** When you are finished, turn the knob to the **OFF** position.



- 9** Remove the bowl from the base by turning it counter-clockwise. Place bowl on clean, dry, flat surface.



WARNING: ALWAYS wait until the blade has stopped moving before removing the lid.

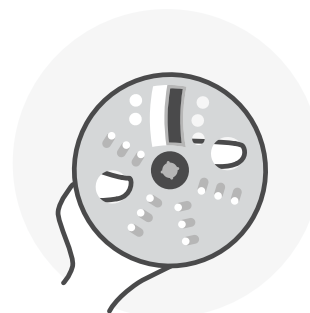


NOTE: Always use the two larger holes (finger holes) to handle the blade discs.




- 13** Pour your food ingredients from the bowl.

 WARNING: Never unload or pour food from bowl without first removing the blade disc.

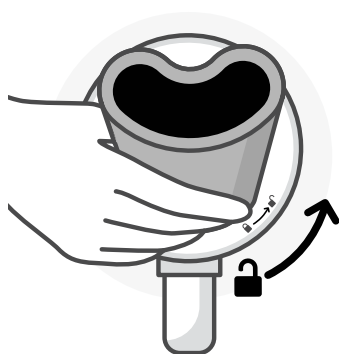

 - 10** Remove the lid by turning it counter-clockwise to unlock.

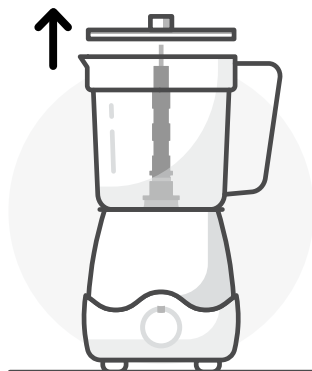

- 11** Using finger holes, carefully remove the disc blade and set it aside. **Blade is sharp, handle with care.**

Using the blender: cup and cross blade.



 
- 1** Place the motor base on a clean, dry, flat surface, like a counter top.



- 2** Add ingredients into the Magic Bullet cup (making sure you do NOT exceed the MAX line).




- 3** Twist on the cross blade assembly until the cup and the blade assembly are sealed tight.

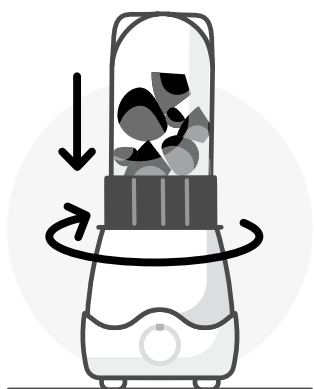


- 4** Turn the sealed cup upside down and place onto the motor base, turning it clockwise to lock the cup onto base.

 NOTE: The cup must be locked securely in place, or the motor will not run.

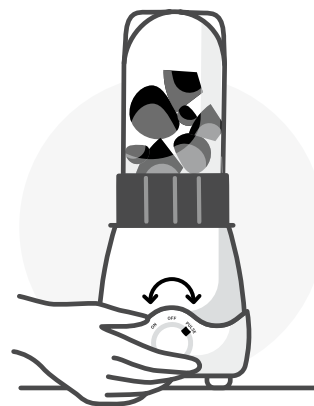


- 5** Turn the power control knob to **ON** or **PULSE** to activate the motor.

 WARNING: Never blend hot or carbonated ingredients, which can pressurize the sealed cup. Always use cool or room temperature ingredients. Never operate for more than one minute. The friction from the rotating blade can heat and pressurize the vessel, causing possible separation and personal injury.

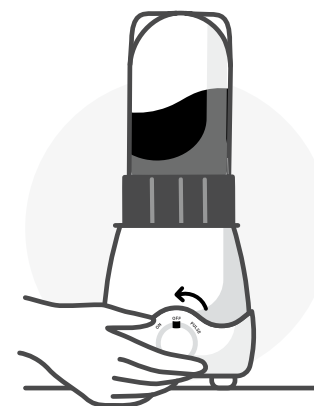

 - 6** When you are finished, turn the knob to the **OFF** position.

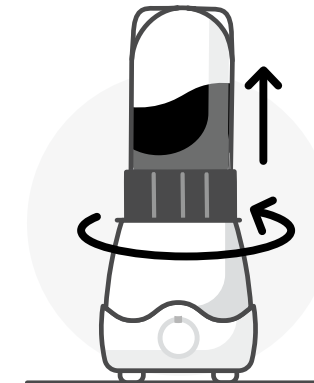


- 7** Remove the sealed cup from the motor base by turning it counter-clockwise to unlock.

WARNING: ALWAYS wait until the blades have stopped moving before removing the cup from the base.




- 8** Turn the sealed cup right side up (blade assembly on top), and twist off the blade assembly. Pour and enjoy!

 Power settings.

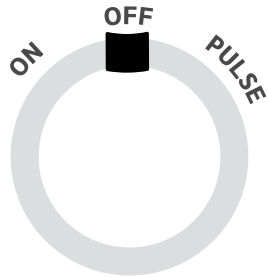

OFF

 
Power is off, unit is not running.

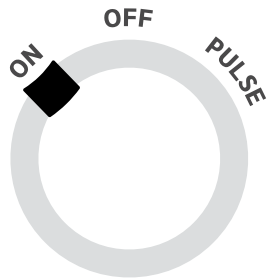

ON

Continuous blending or food processing action. The unit stays **ON** until you switch to **OFF**.

  **WARNING:** Never leave the blender on for more than one minute!

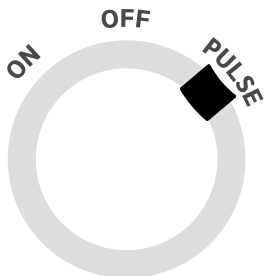

PULSE

Provides quick bursts of pulsing action for more control over the texture of your food or drink. You must hold the knob on **PULSE** to keep the unit on, otherwise the knob will automatically move to **OFF**.

Care & maintenance.

Cleaning the Magic Bullet Kitchen Express™ is easy. All components, except for the motor base, are dishwasher-safe.

STEP 1: The most important thing — **ALWAYS POWER OFF THE UNIT** and **UNPLUG** the motor base from the power outlet when it is not in use. Do not attempt to handle the appliance until all parts have stopped moving!

STEP 2: To start the cleaning process, empty the bowl, making sure little to no food scraps remain. Disassemble all parts. Make sure the blending cup/cross blade and work bowl are not attached to the motor base.

STEP 3: Simply place any of the parts (except for the motor base) on the top rack of the dishwasher or hand wash with warm, soapy water and rinse. **NEVER** use the sanitize cycle as this may warp the cups or work bowl.

 **WARNING:** Always be extremely careful when handling blades, as they are very sharp. To pick up and handle the blade discs, always use the two larger finger holes in each disc.

MOTOR BASE:

- To avoid risk of injury, **NEVER** attempt to clean the actuator system on the motor base while the Magic Bullet Kitchen Express™ is plugged in.

- Do not attempt to remove any pieces from the motor base.
- Use a sponge or damp cloth to wipe down the motor base until clean.
- If necessary, you may use a small brush to scrub the actuator system area to ensure it is clean (dried food particles can prevent the tabs from working properly).

 **WARNING:** Never submerge the motor base in water or any other liquid.

How to store:

When not in use, store all pieces of the unit together in a safe place where they will not be damaged and won't cause harm.

Replacement parts:

To order additional parts and accessories, please visit our website at Nutribullet.co.uk.

! Save these instructions!

EN/Explanation of the marking



EN/This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal; recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling



EN/The transport and protective packing has been selected from materials, which are environmentally friendly for disposal and can be recycled. Ensure that any plastic, wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Rather than just throwing these materials away, recycle them



EN/A Class II or double insulated electrical appliance is one which has been designed in such a way that it does not require a safety connection to electrical earth (ground).



EN/Manufacturer's declaration that product meets the requirements of the applicable EC directives

Distributed by:
High Street TV Group Limited
PO Box 7903
Corby, NN17 9HY

Manufactured for:
NUTRIBULLET, LLC
LOS ANGELES, CA 90025, USA

nutribullet

Need help?
We're here
for you

Visit

NutriBullet.co.uk for:



FAQ'S

 


Video Guides



Recipes

Join our community



MAGIC BULLET® and MAGIC BULLET KITCHEN EXPRESS™
are the registered trademarks of Capbran Holdings, LLC. | nutribullet.co.uk
Copyright © 2020, Capbran Holdings, LLC. Distributed by Capital Brands Distributions,
LLC, Los Angeles, CA 90025. All rights reserved. Made in China.

Illustrations may differ from the actual product. We are constantly striving
to improve our products, therefore the specifications contained herein
are subject to change without notice.

MB09200_201210